
REP®

ENGINEERED IN COLORADO

## ASSEMBLY INSTRUCTIONS


# ADJUSTABLE DUMBBELL STAND

## DBA-7000

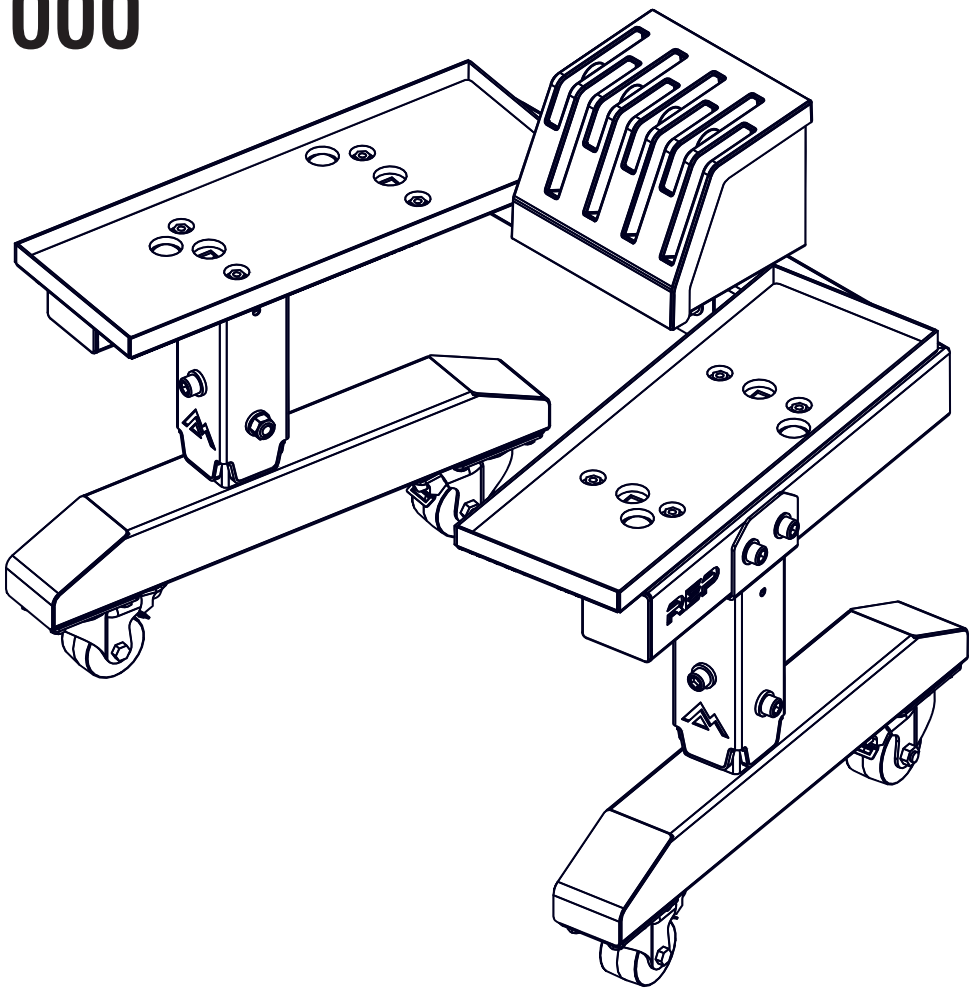


**STILL NEED HELP WITH ASSEMBLY?**
VISIT OUR ASSEMBLY LIBRARY HERE:
**HELP.REPFITNESS.COM**


# PARTS LIST

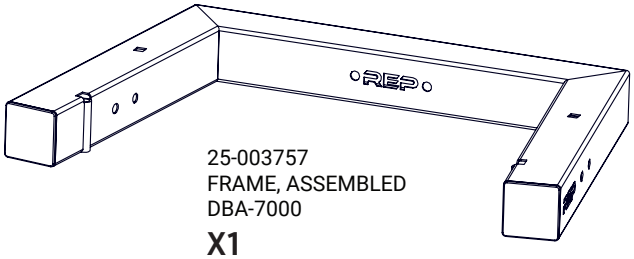

25-003757
FRAME, ASSEMBLED
DBA-7000
**X1**

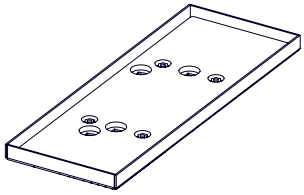


25-003679
DB TRAY, W LINER,
LEFT - PEPIN 120
**X1**

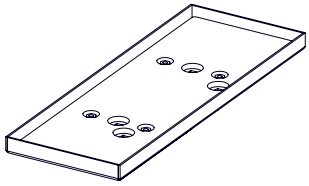


25-003709
DB TRAY, W LINER,
RIGHT - PEPIN 120
**X1**


**- OR -**

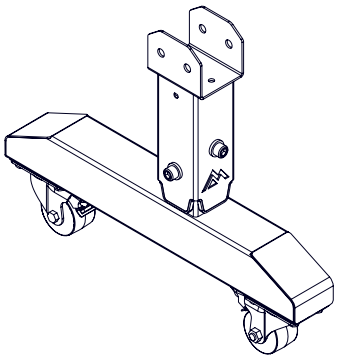


25-003753
ADJUSTABLE LEG, LEFT,
ASSEMBLED DBA-7000
**X1**

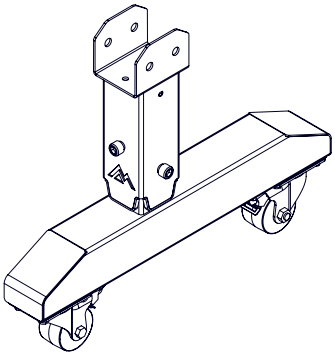

25-003677
ADJUSTABLE LEG, RIGHT,
ASSEMBLED DBA-7000
**X1**

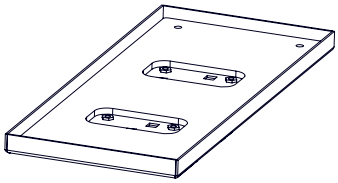


25-003718
DB TRAY, W LINER,
LEFT - QUICKDRAW
**X1**

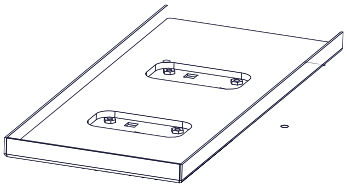

25-003685
DB TRAY, W LINER,
RIGHT - QUICKDRAW
**X1**

# HARDWARE AND TOOLS




10-003771
NUT, NYLON INSERT,
M12X1.75, L12MM
**X8 - QD**
**X10 - PEPIN**




10-0418
WASHER, FLAT, M12,
BLACK
**X12 - QD**
**X16 - PEPIN**




10-003749
M12X1.75 SHCS,
L100MM, BLACK
**X4 - QD**
**X6 - PEPIN**



10-003747
M12X1.75 L95MM,
CARRIAGE BOLT, BLACK
**X4**




19MM WRENCH - DBA-7000
1X - INCLUDED

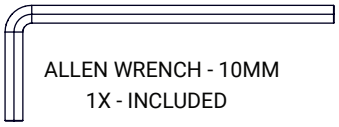

ALLEN WRENCH - 10MM
1X - INCLUDED


## DBA-7000-01 PEPIN ONLY




10-0936
M8X1.25 L20MM,
ULP SHCS, BLACK
**X8**



10-0424
WASHER, FLAT, M8
**X8**

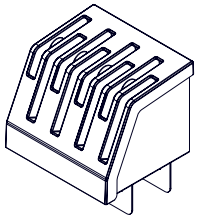

25-003748
ADD ON WEIGHT STORAGE,
ASSY, DBA-7000
**X1**



5MM ALLEN WRENCH
X1 INCLUDED


## DBA-7000-02 QUICKDRAW ONLY



10-0579
M6X1.00 L30 BUTTON
HEAD HEX DRIVE
**X6**




10-0036
WASHER, FLAT, M6
**X6**



4MM ALLEN WRENCH
X1 INCLUDED

**1**

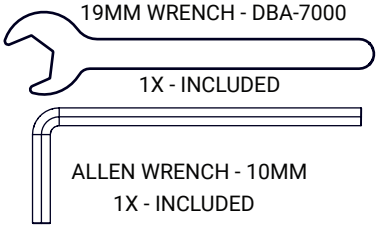




10-003771 **X2**


10-0418 **X4**


10-003749 **X2**

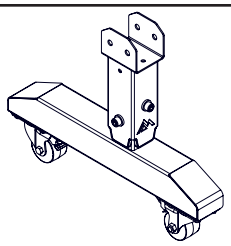

25-003753 **X1**

# ASSEMBLE LEFT LEG TO FRAME



**TIP: MAKE SURE YOUR REP MOUNTAIN LOGO IS FACING THE FRONT OF YOUR STAND (OPEN SIDE OF FRAME)**

**2**

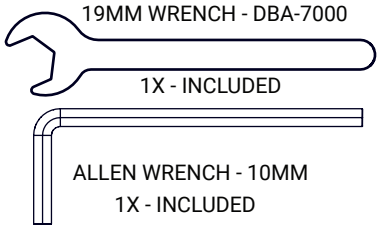





10-003771 **X2**


10-0418 **X4**



10-003749 **X2**

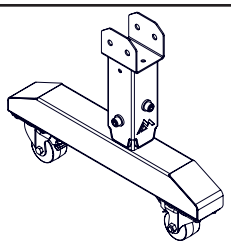

25-003677 **X1**

# REPEAT STEP 1 ON RIGHT LEG

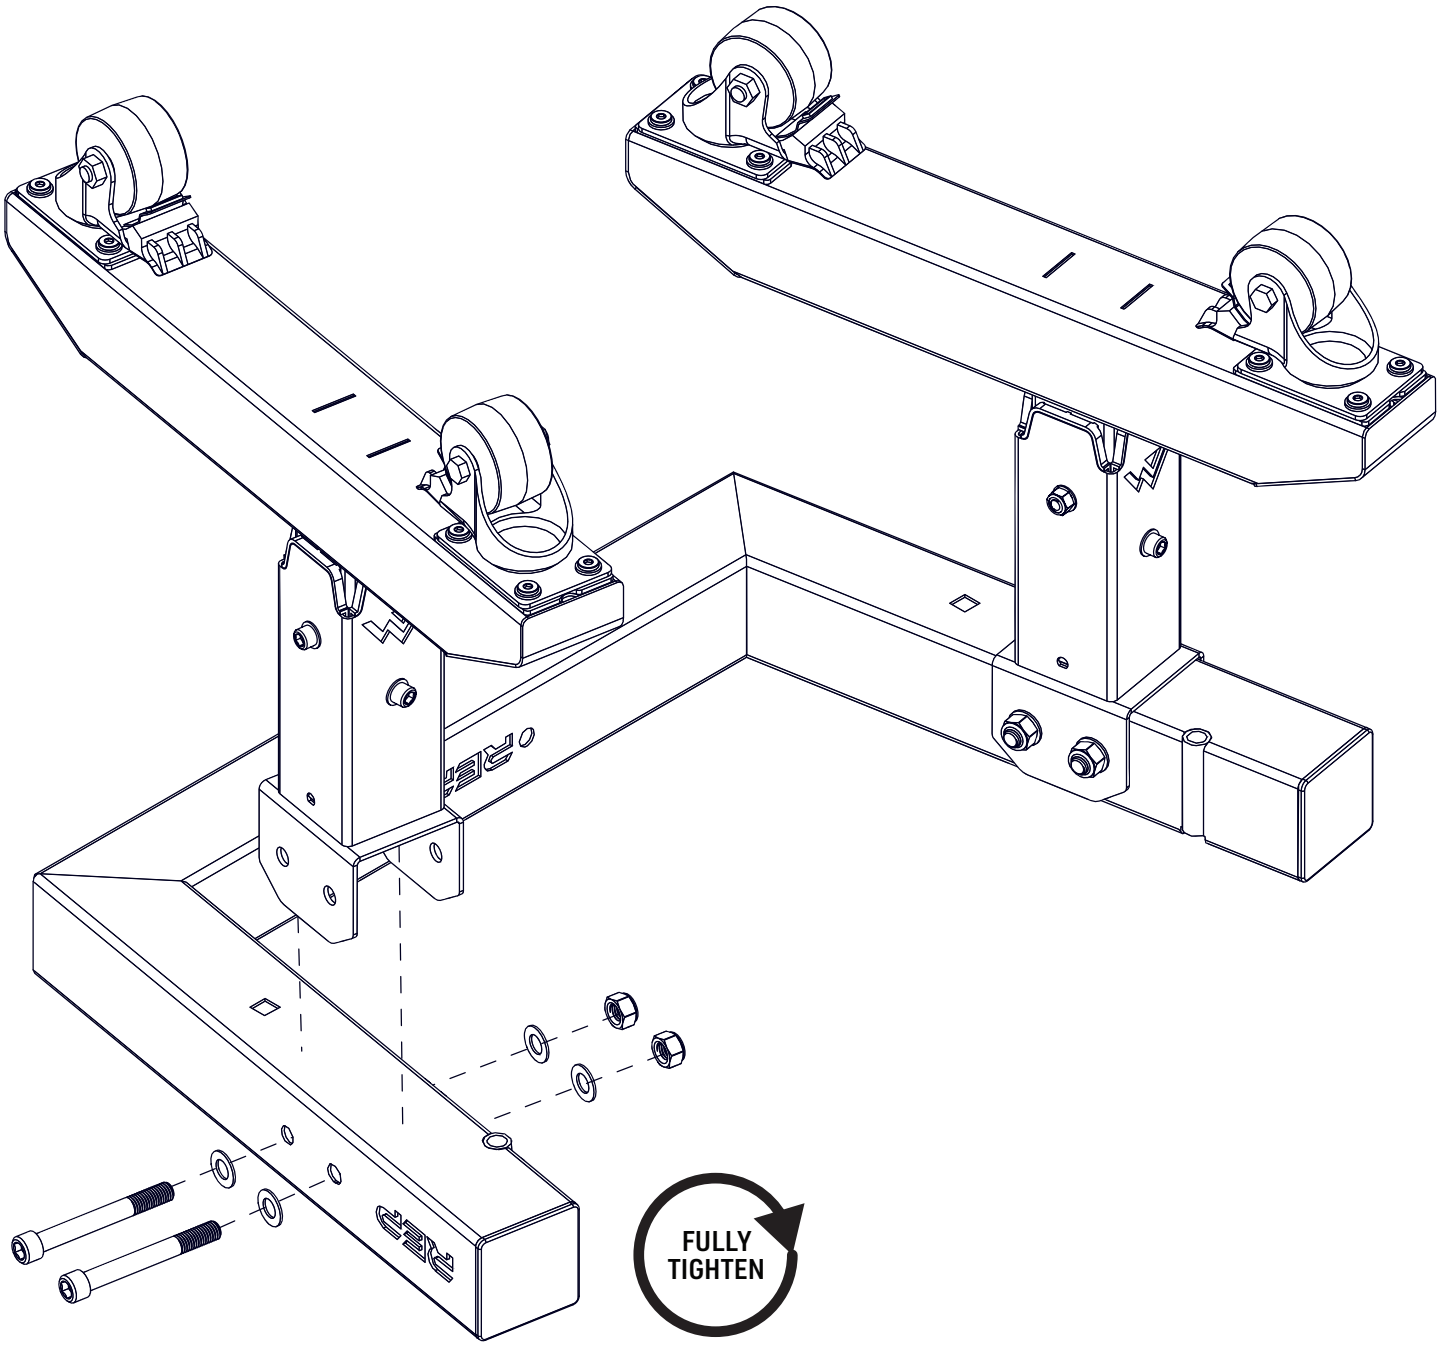


## UPRIGHT STAND AND CHECK THAT WHEELS ARE LOCKED

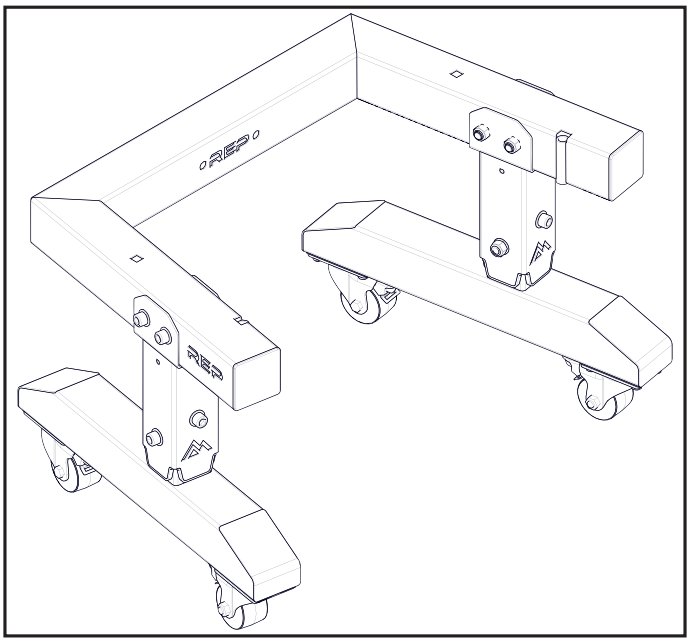


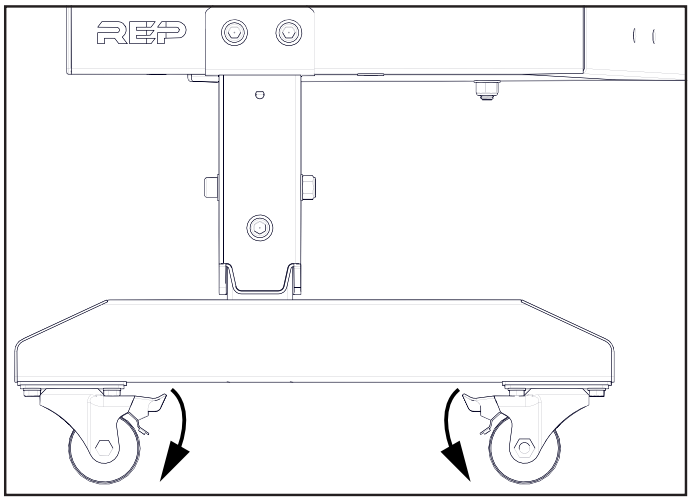

3

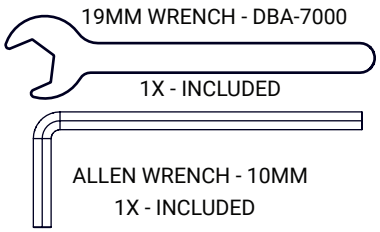



# ADJUST FOR HEIGHT (OPTIONAL)

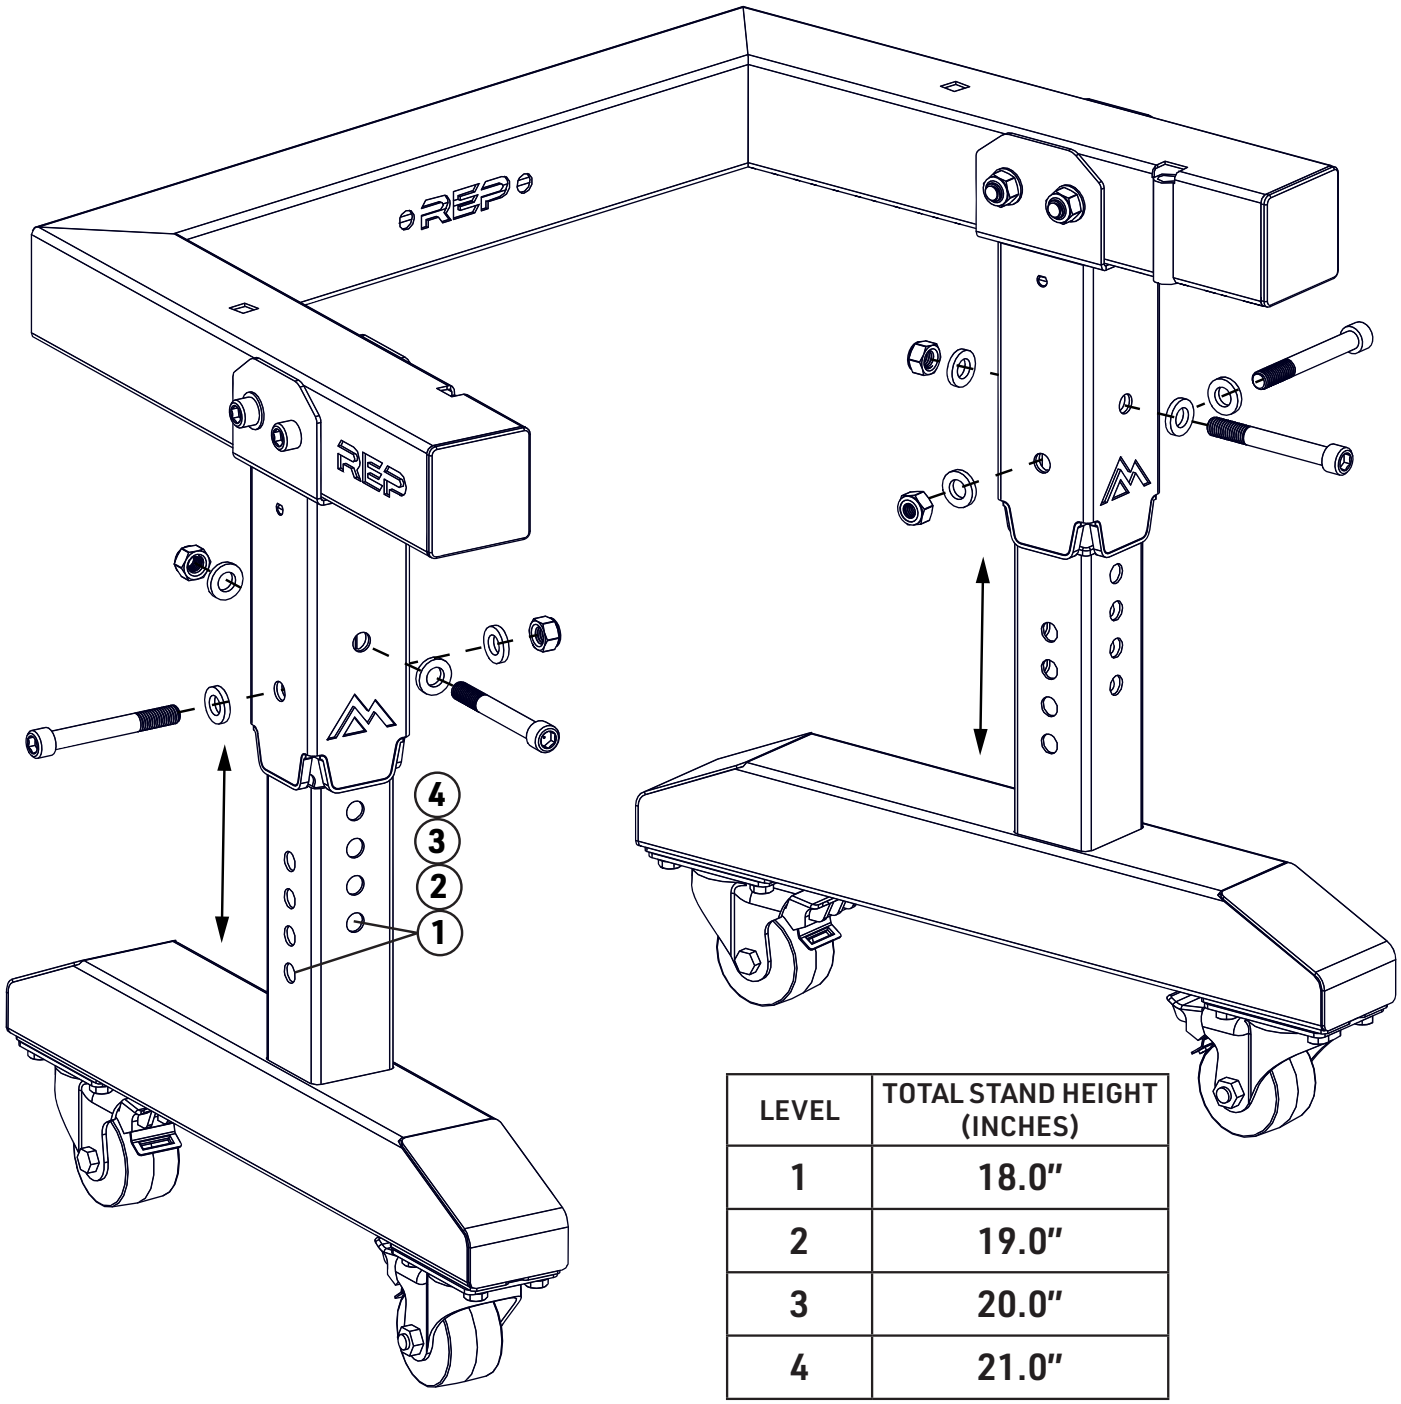


| LEVEL | TOTAL STAND HEIGHT (INCHES) |
|---|---|
| 1 | 18.0″ |
| 2 | 19.0″ |
| 3 | 20.0″ |
| 4 | 21.0″ |


STOP

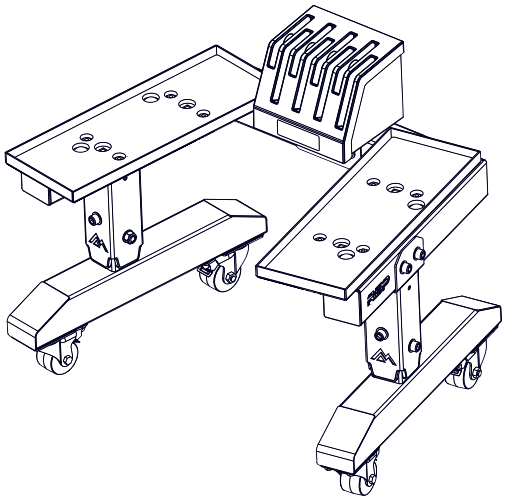

7

4

## DBA-7000-01
## REP® x PÉPIN™ FAST Series™ Adjustable Dumbbell

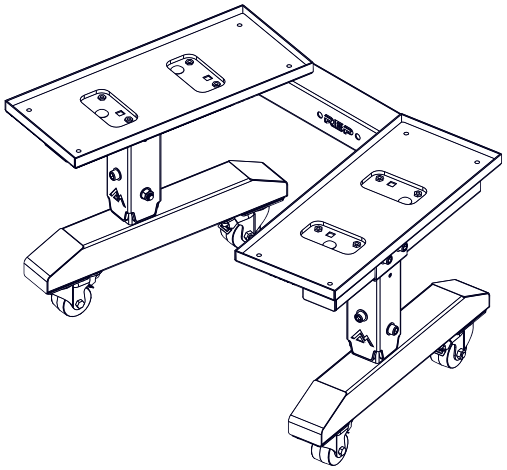



12

7

## DBA-7000-02
## REP® QuickDraw™ - Adjustable Dumbbell


# 4

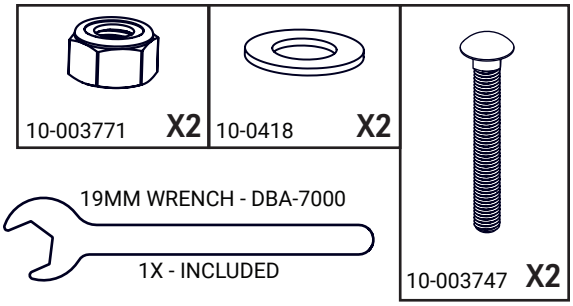

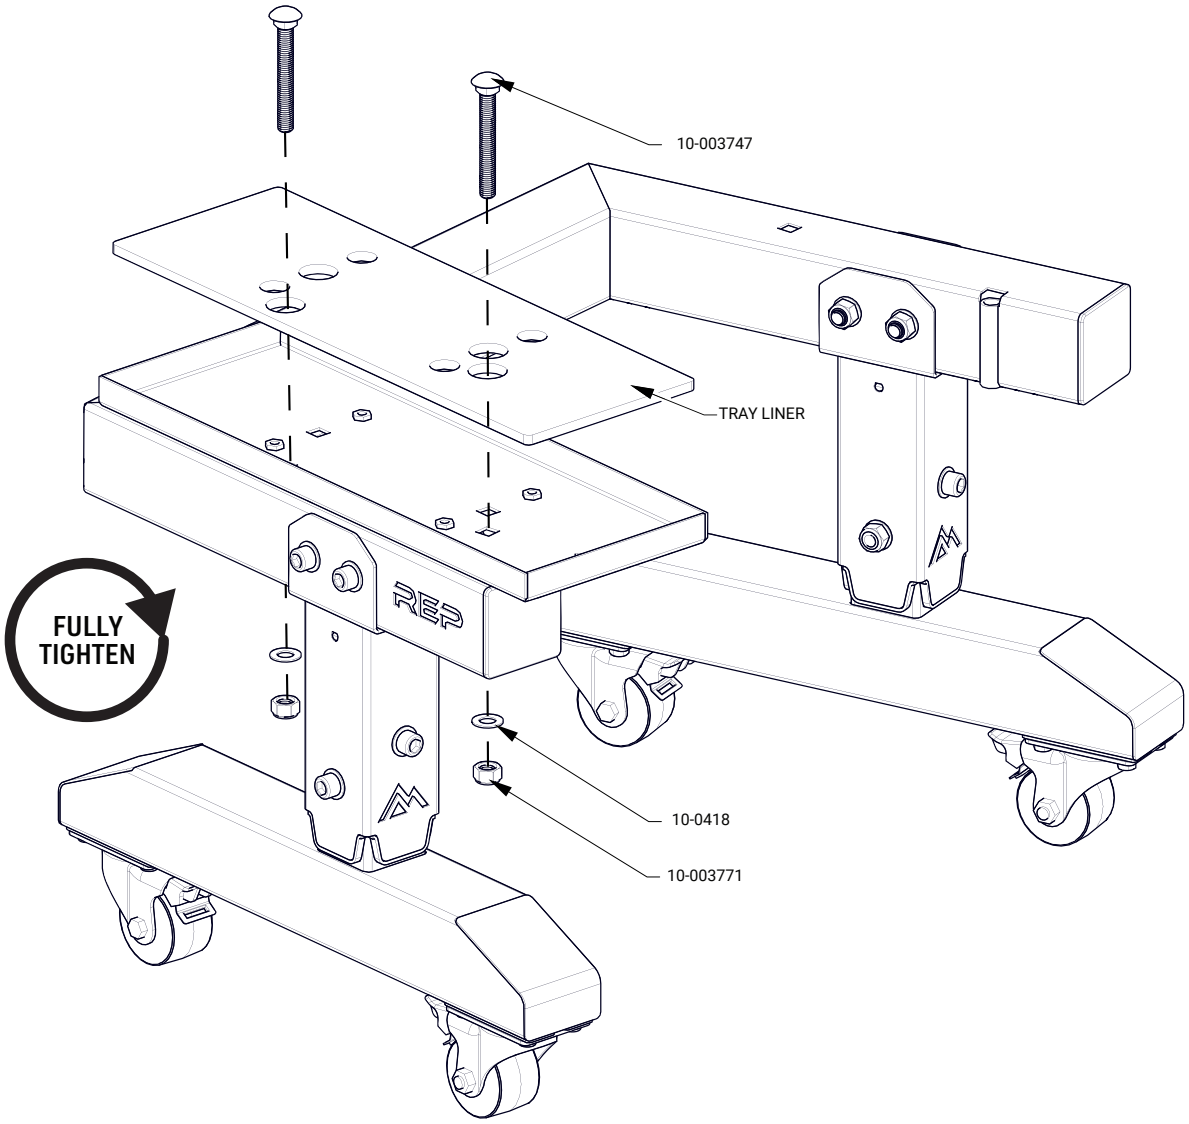




## ANGLED TRAY ORIENTATION SHOWN, SEE NEXT PAGE
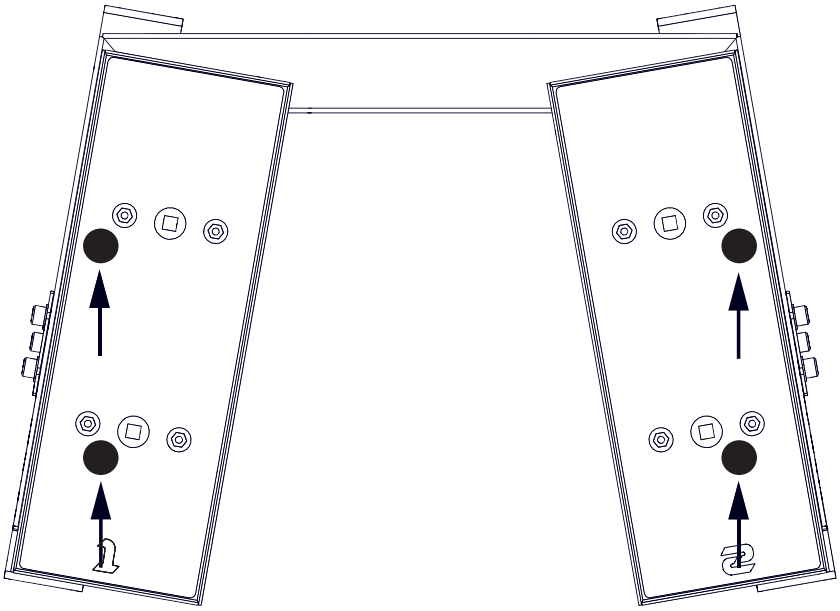
## ANGLED TRAYS - USE OUTER BOLT HOLES

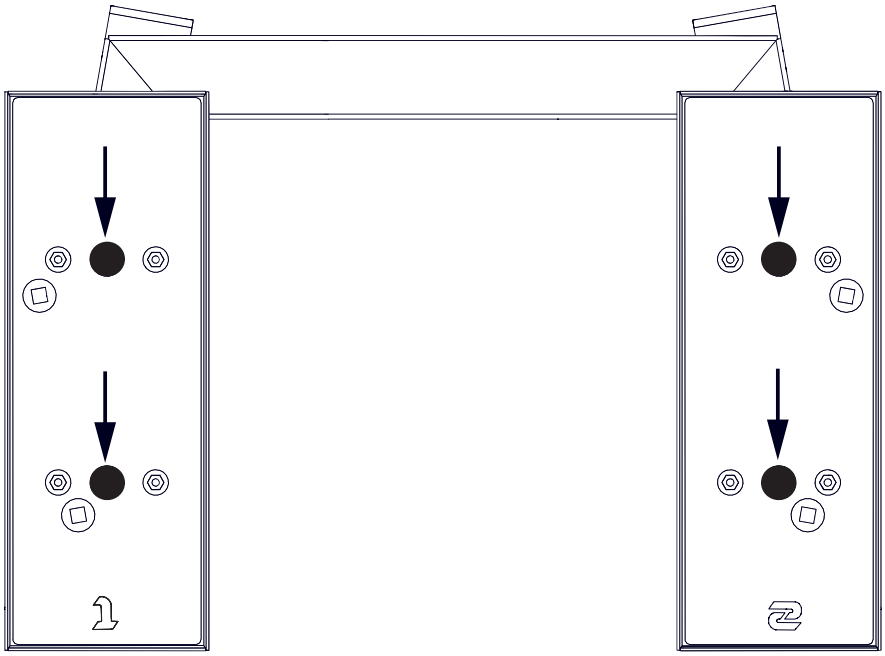



## STRAIGHT TRAYS - USE INNER BOLT HOLES





## TIP: LIFT MAT. LEFT TRAY IS “1”, RIGHT IS “2”


# 4

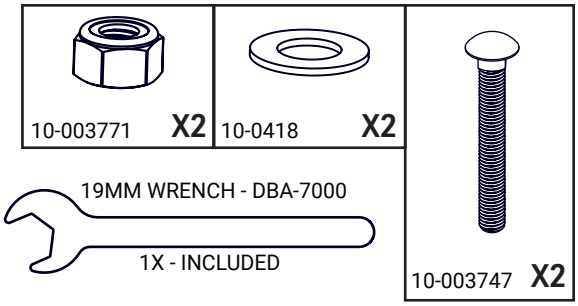




## REPEAT STEP 3 ON RIGHT TRAY

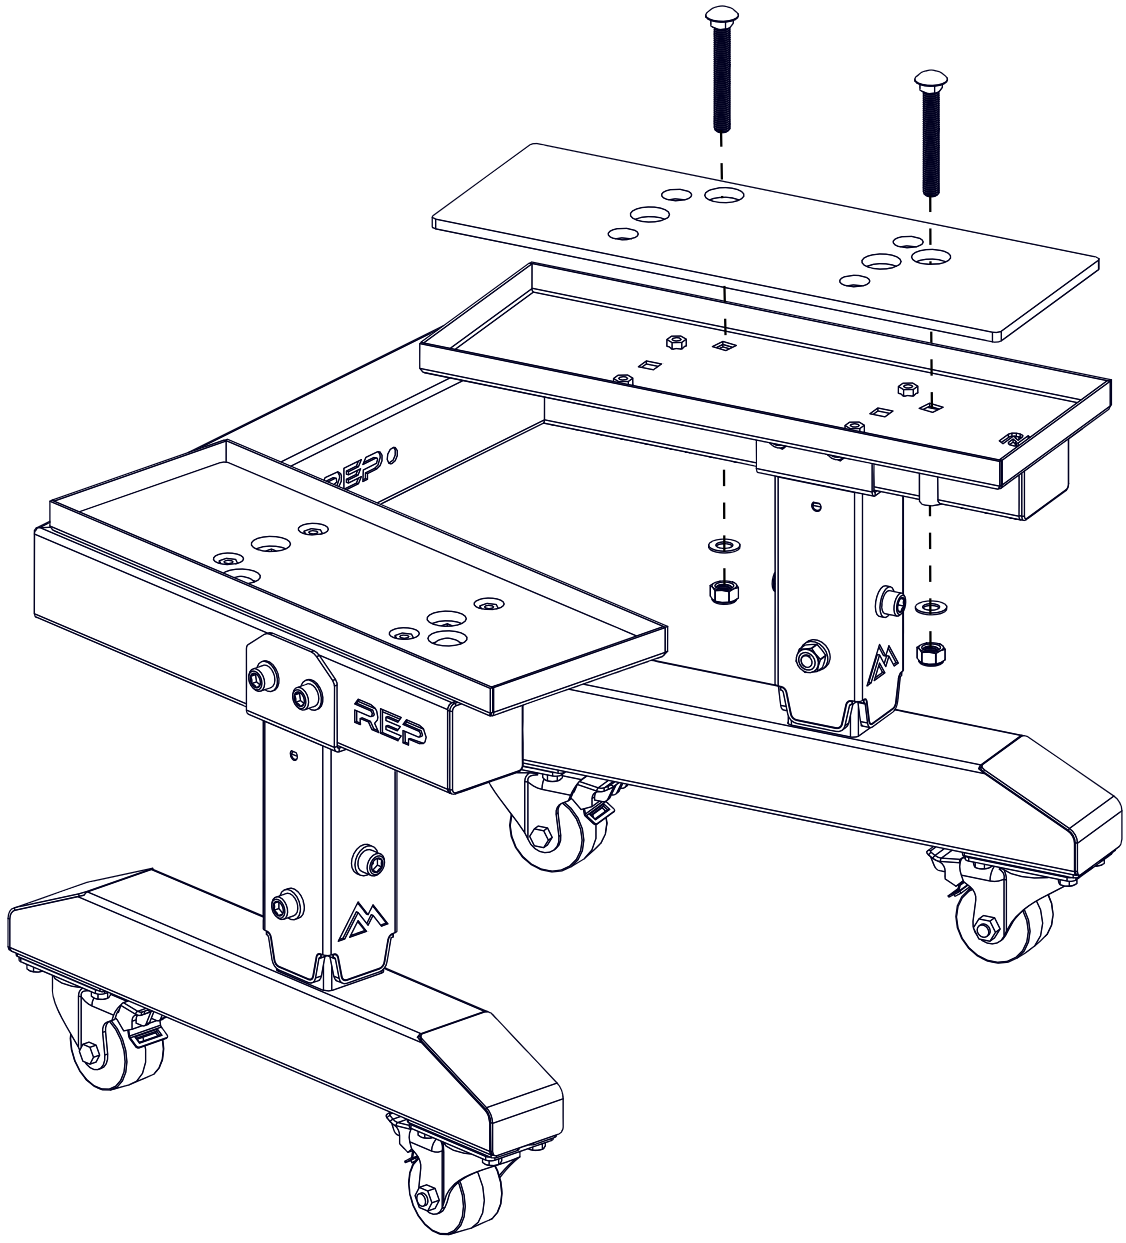


# 5

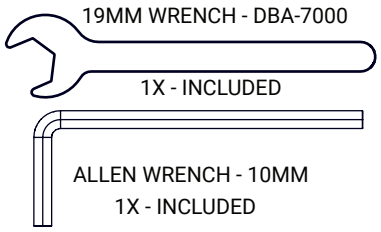

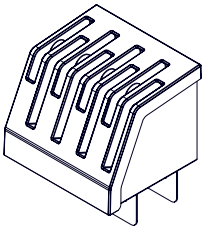
| | | | | | | | |
|---|---|---|---|---|---|---|---|
|  | 10-003771 | X2 |  | 10-0418 | X4 |  | 10-003749 X2 |
|  | 25-003748 | X1 | | | | | |

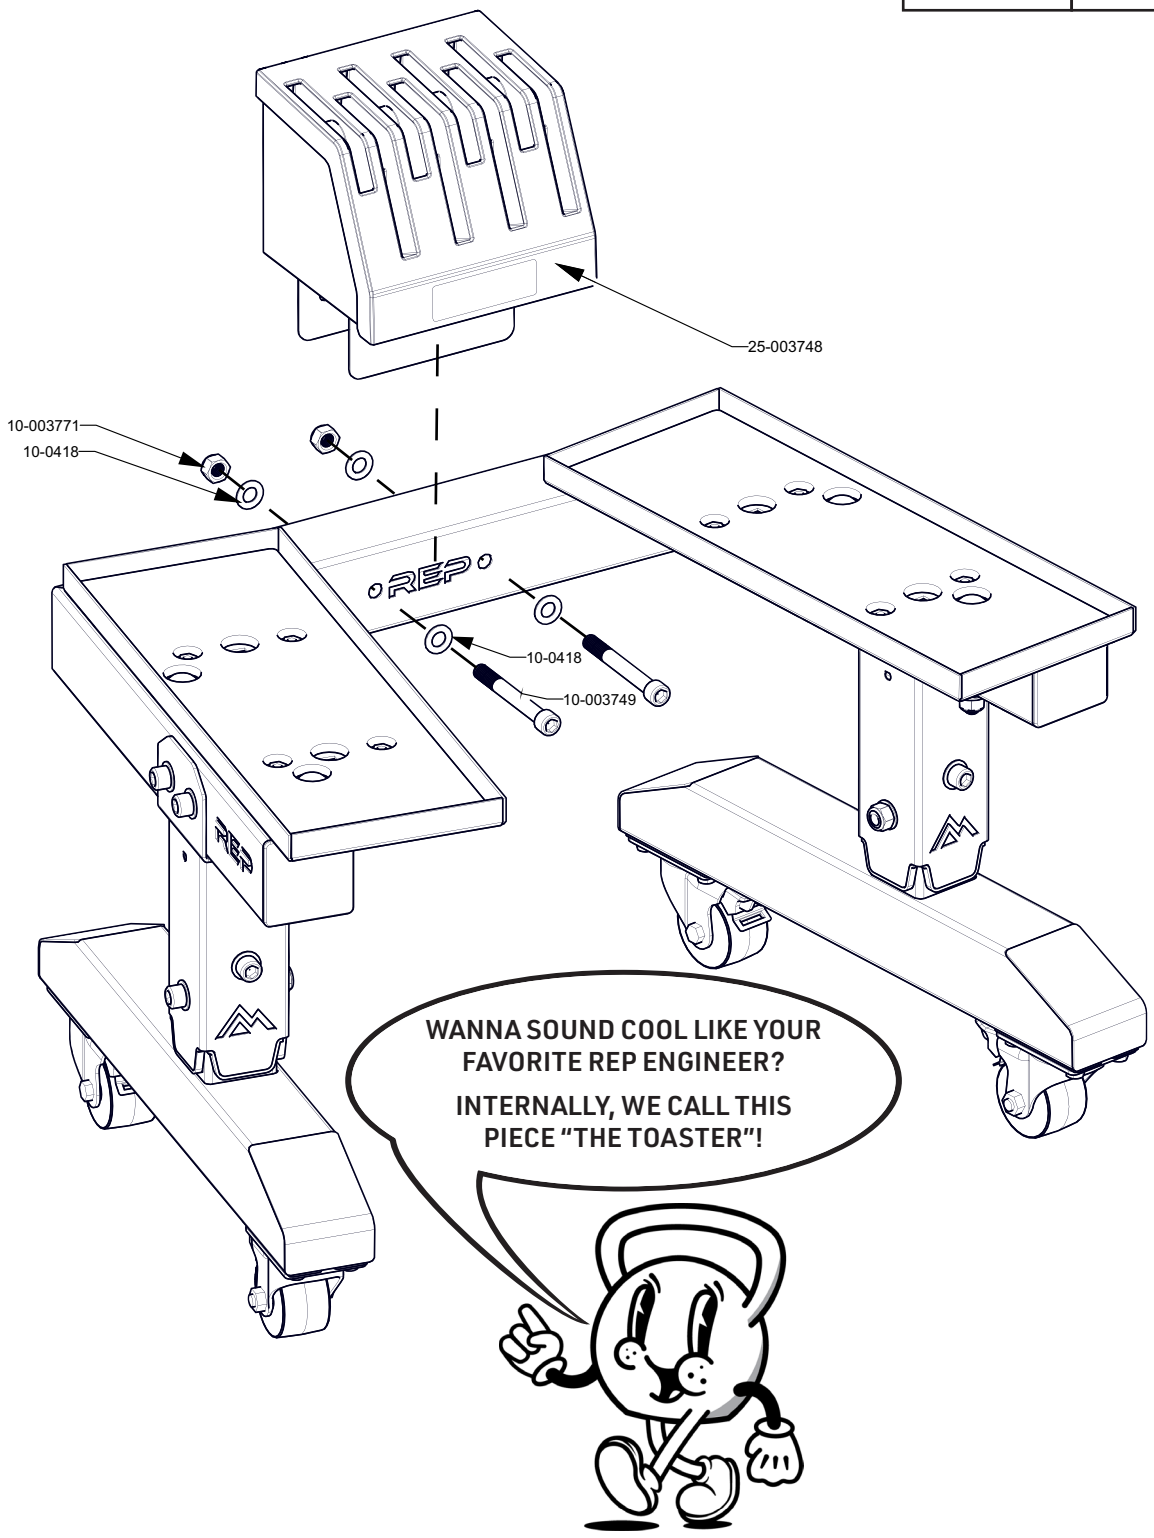

# 6

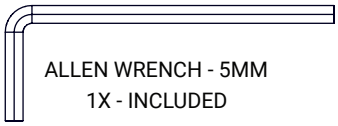


ALLEN WRENCH - 5MM
1X - INCLUDED



10-0936 **X8**





10-0424 **X8**

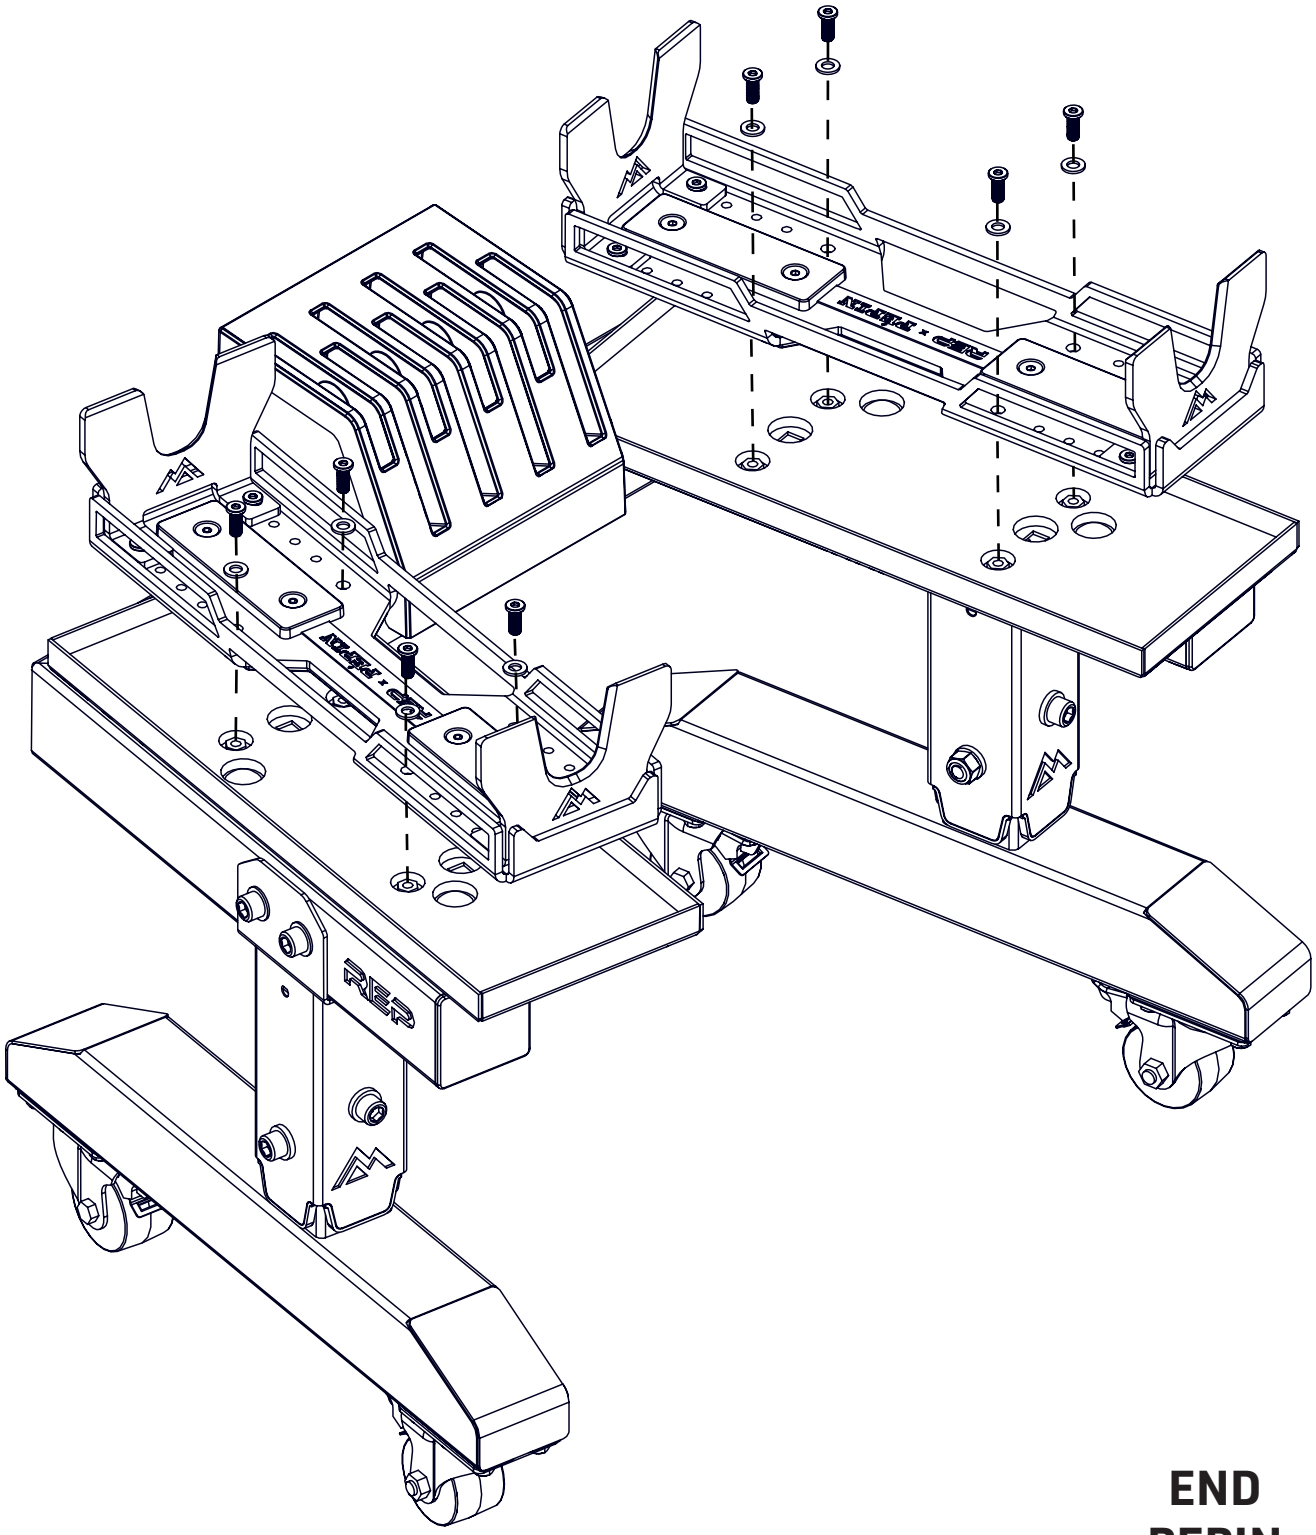

## END
## PEPIN
## ASSEMBLY


# 7

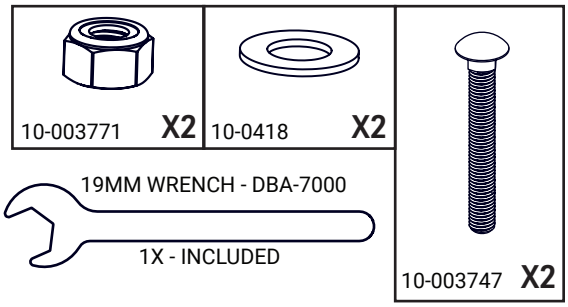

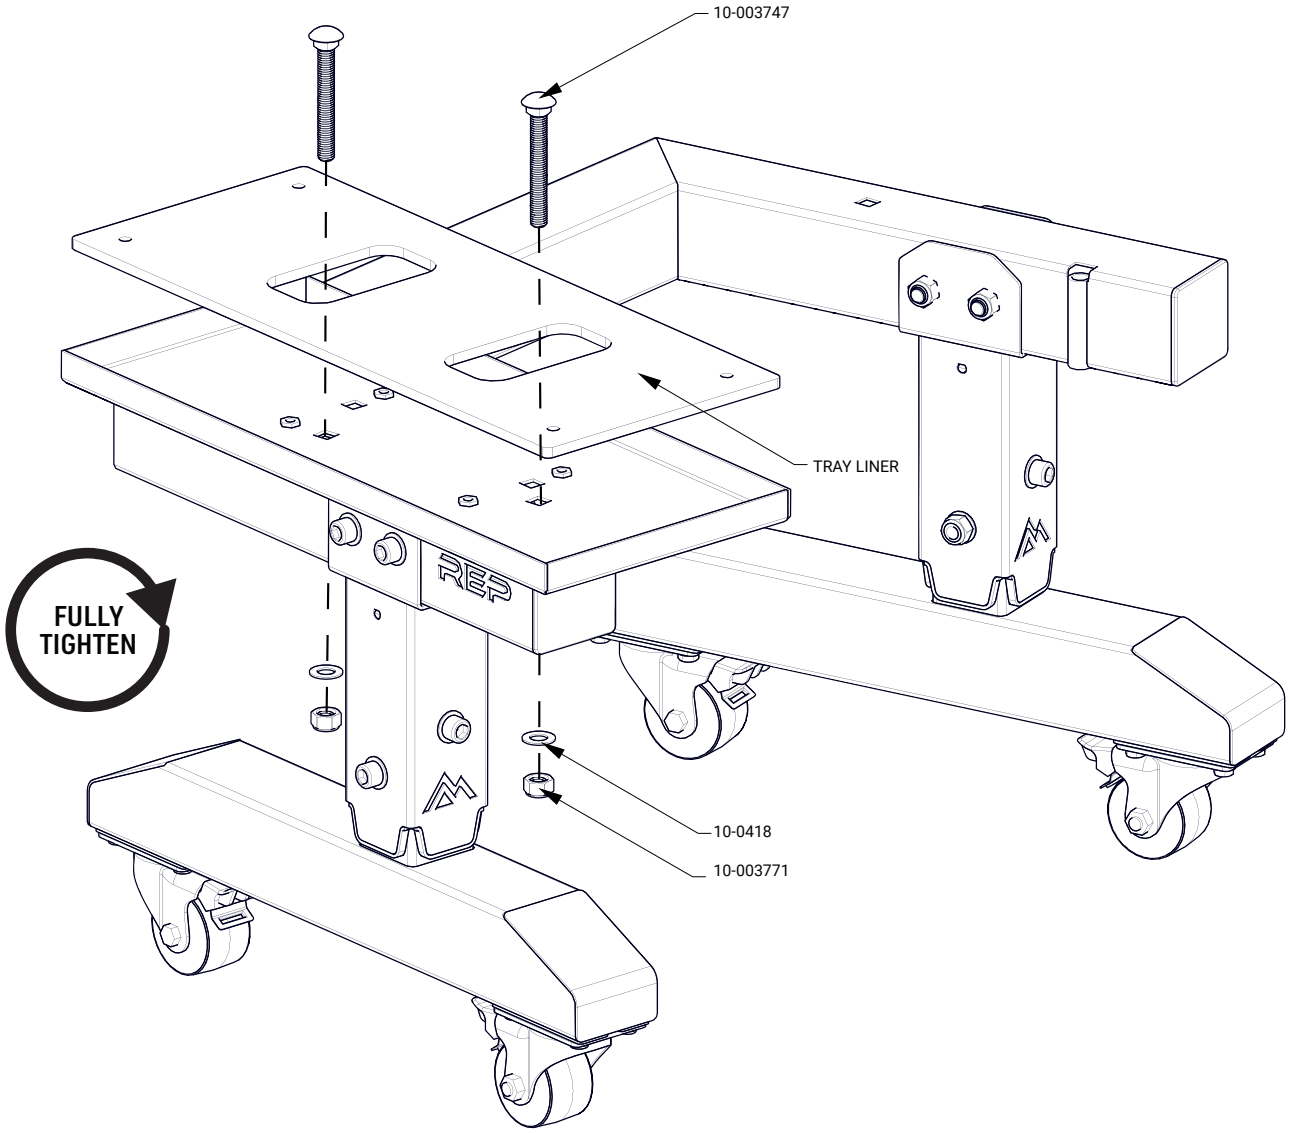




## ANGLED TRAY ORIENTATION SHOWN, SEE NEXT PAGE
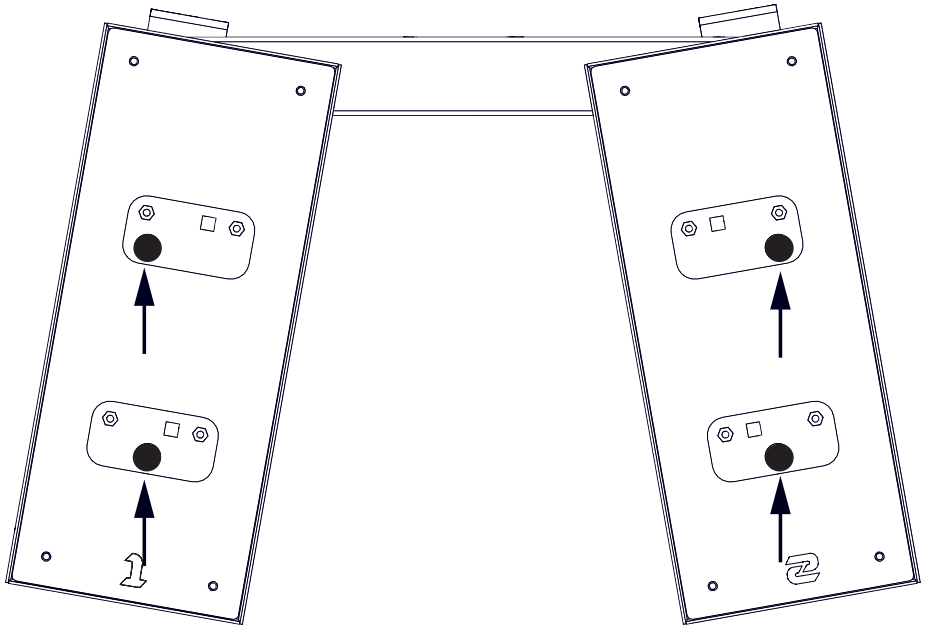
## ANGLED TRAYS - USE OUTER BOLT HOLES

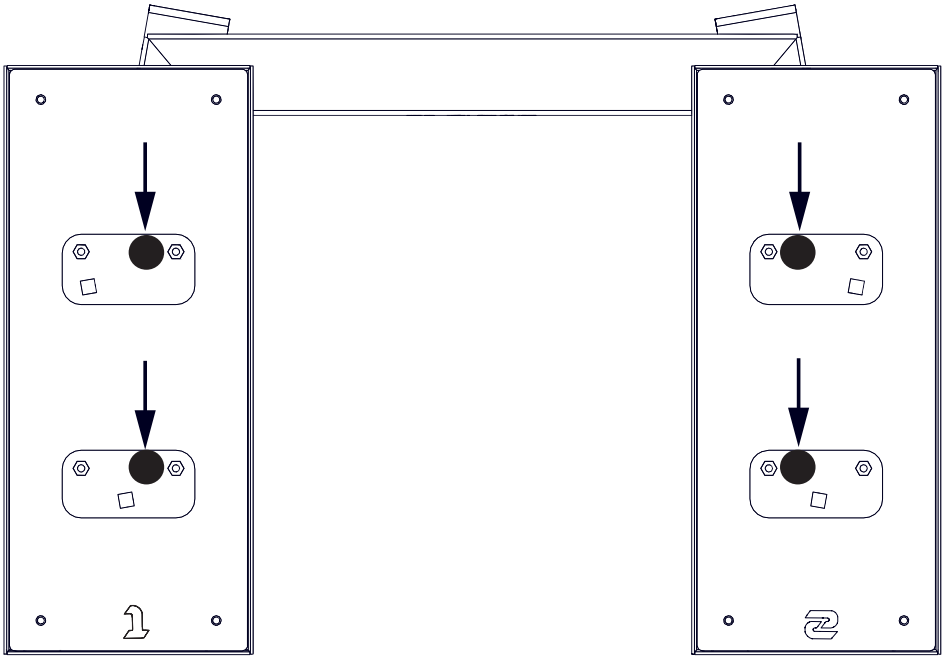


## STRAIGHT TRAYS - USE INNER BOLT HOLES




## TIP: LIFT MAT. LEFT TRAY IS “1”, RIGHT IS “2”

8

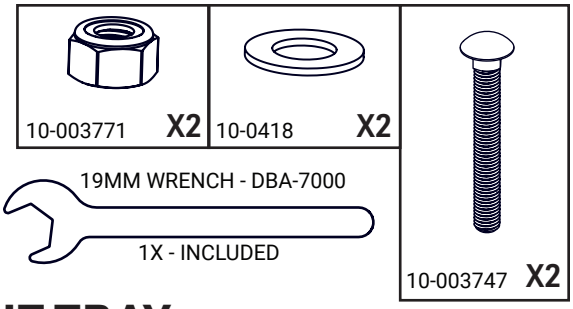



# REPEAT STEP 7 ON RIGHT TRAY

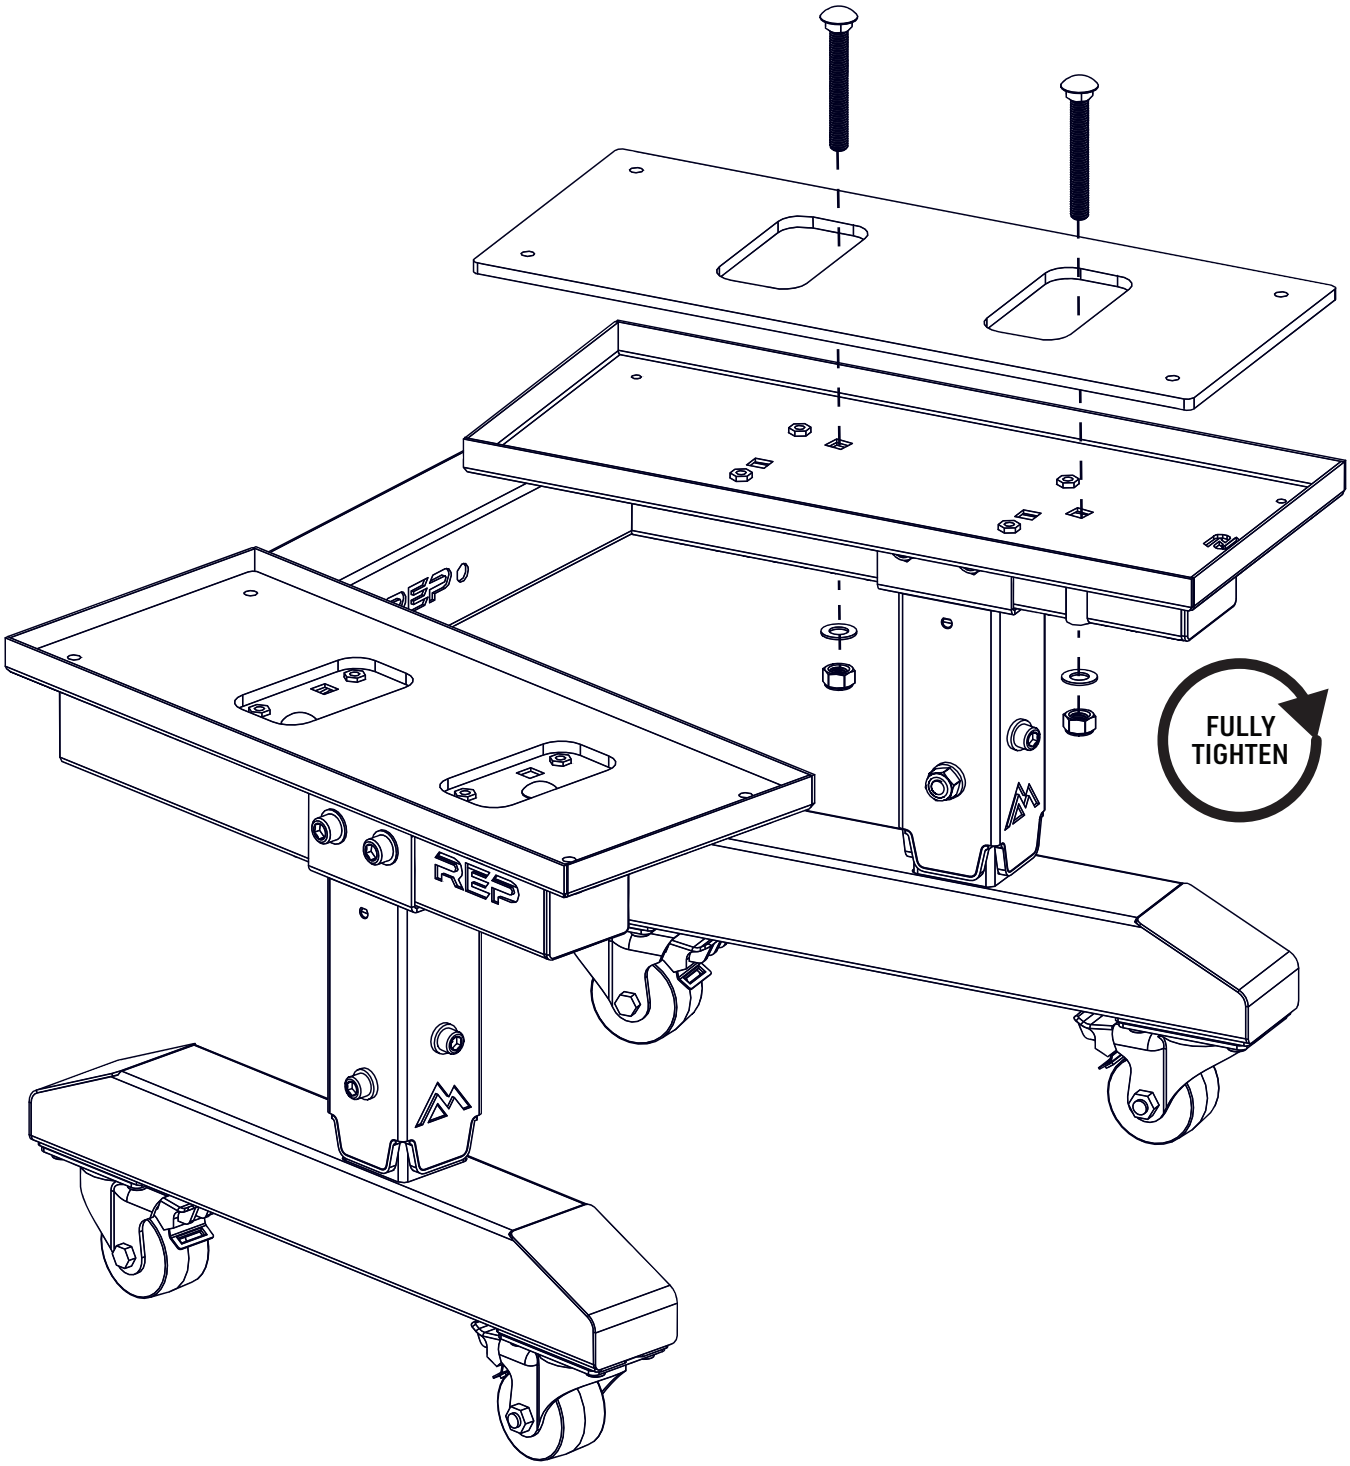


# 9

| 10-0579 X6 | 10-0036 X6 |
|---|---|

4MM ALLEN WRENCH
X1 - INCLUDED

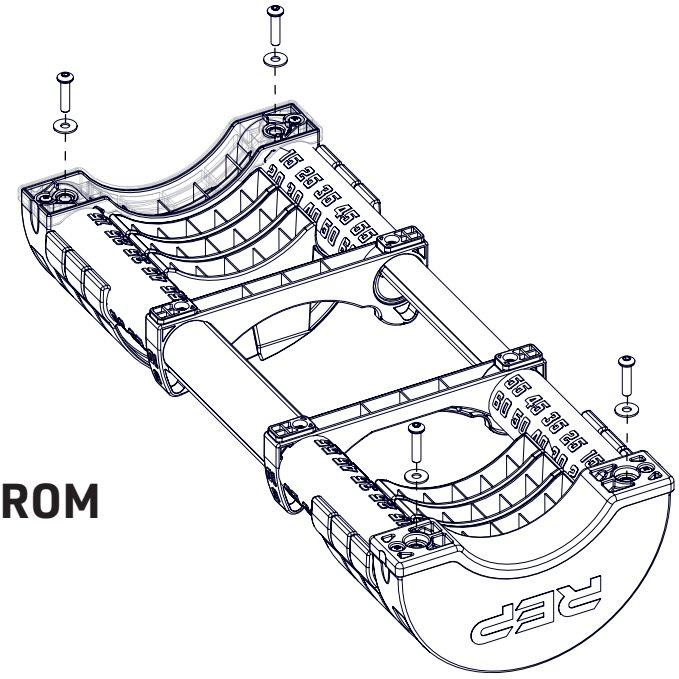

**REMOVE HARDWARE FROM CRADLE**

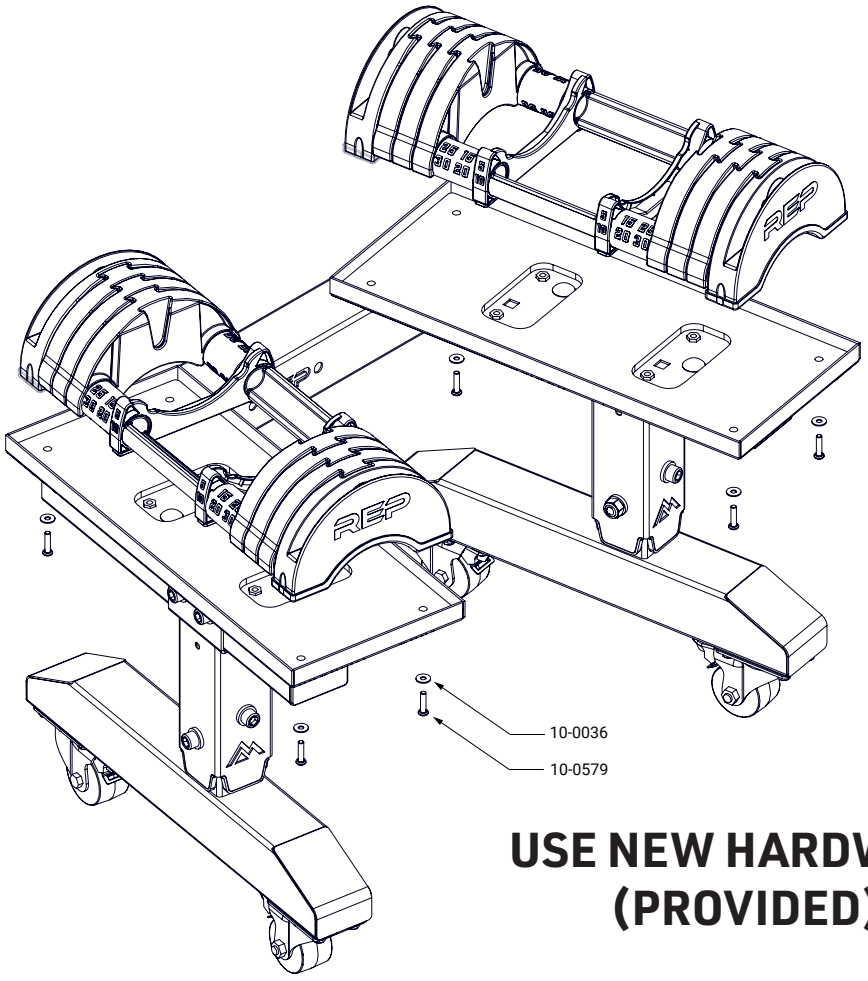


**USE NEW HARDWARE (PROVIDED)**